



## About Cautions

**CAUTION:** A CAUTION indicates a potential for property damage, personal injury, or death.

## Replacing Print Cartridges for Dell™ Color Laser Printer 3110cn and Dell Multifunction Color Laser Printer 3115cn

**CAUTION:** Before performing any of the following procedures, read and follow the safety instructions in your *Owner's Manual*.

**NOTE:** The graphical image used in this document is a Dell Color Laser Printer 3110cn. However, the operations to install the Print Cartridges remain the same for both Dell Color Laser Printer 3110cn and Dell Multifunction Color Laser Printer 3115cn.



Dell Color Laser Printer 3110cn



Dell Multifunction Color Laser Printer 3115cn

**CAUTION:** Never throw used print cartridges into a fire. The residual toner could explode resulting in burns and injuries.

**CAUTION:** Since the used print cartridge may spill some toner, do not shake it.

**NOTICE:** To protect the drums of the print cartridges against bright light, close the front cover within five minutes. If the front cover remains open for more than five minutes, print quality may deteriorate.

Dell print cartridges are available only through Dell. You can order more cartridges online at <http://www.dell.com/supplies> or by phone. To order by phone, see "Ordering Supplies" in your *Owner's Manual*.

Dell recommends Dell print cartridges for your printer. Dell does not provide warranty coverage for problems caused by using accessories, parts, or components not supplied by Dell.

### Installing a New Print Cartridge

- 1 Push the side button and open the front cover.
- 2 Grasp the handles at both ends of the print cartridge that you want to replace and pull it out.

